68 Programming Manuals

QUICK START HOW TO PROGRAM

1.Download QMK Toolbox <u>https://github.com/qmk/qmk_toolbox/releases</u> Choose the toolbox according to your system, Mac system choose pkg or app file,Windows choose toolbox.exe file.

2.Download Zadig or other driver updated software.

3.Change layout on kbfirmware.com,this json file can be used to modify 64 Minila 60 layout,not only Minila,upload <u>68 json file</u>

4.Then press keymap, You can select layer to change the keys,Layer 0 is the default layer you always use,layer 1 is the 2nd layer which is realized by Fn.

LSHIFT Z X		M , .	
LCTRL LGUI LALT	SPACE	LALT	MO(1) MENU LCTRL
WIRING PINS	KEYMAP MACROS QUANTUM	SETTINGS COM	PILE
	Select a layer to modify	у.	
	▼ 0 ∧		
	Configure the selected k	ey.	
	No key selected		

5.When you modify the keys ready, click Settings and

it will show No errors or warnings!And then click Compile to download hex file. If something wrong,it will remind you of the fault.Just modify according to the reminder and then download hex file.

WIRING	PINS	KEYMAP	MACROS	QUANTUM	SETTINGS	COMPILE	
Configure your settings.							
			Layout Nam	OK60-X RC	GB 🕜		
			Bootloader Siz	4096 KB	Å 🕜		
			WS2812 LED	os – 10	+ 🔞		
			Backlight Leve	ls – 3	+ 🕝		
			Save	e your layout.			
			Save	Configuration			
			Check er	rors and warning	gs.		
			No err	ors or warnings!			
WIRING	PINS	KEYMAP	MACROS	QUANTUM	SETTINGS	COMPILE	
		Do	wnload the .hex	file to flash to yo	our keyboard.		
			Do	wnload .hex			
			Or downlo	oad the source fi	les.		
			Do	ownload .zip			

6.Reset the keyboard

Method 1,press FN+ESC.

Method 2,pull out USB from PC,press spc+B together till inserting USB to PC. Method 3,if you change your keys without reset or SPC B button,you can still open the back cover to press the reset button.Method 3 won't use as usual.

7.Open Zadig, click list all, choose atmega32u4,

install the driver libusb-win32 (v1.2.6.0).

🗾 Zadig —	· 🗆 🗙
<u>D</u> evice <u>O</u> ptions <u>H</u> elp	
ATm32U4DFU	✓ □ Edit
Driver libusb0 (v1.2.6.0)	re Information USB (libusb) sb-win32 sbK USB (Microsoft)
8 devices found.	Zadig 2.1.2.677

8.Open Toolbox,click open button to choose the hex file you just download,click flash.Make sure the chipset is atmega32u4. When it shows as below image,that means it succeeds.

🕲 QMK Toolbox		- 🗆 X
Local file	Microcontroll	er
E:\QMK.Flasher-darwin-x64-0.5.2\ok60xrgb.hex	✓ Open atmega32u4	~
Keyboard from gmk.fm Keymap	Flashers enabled	Flash Reset
6ball V default V Los	d DFU V Halfkay	Auto-Flash
<pre>*** QMK Toolbox (http://gmk.fm/toolbox) Supporting following bootloaders:</pre>	<pre>rogrammer.github.io/) hongnu.org/avrdude/) (https://pjrc.com/teensy/loader_ rge.net/) forge.net/) arwin-x64-0.5.2\ok60xrgb.hex" 0 bytes tes).</pre>	_cli.html)
Say Hello Jump to	Reset EEPRO	M List HID
Erase, flash, and reset the MCU with the provided .hex file		

9.More details about keycode on kbfirmware, refer to Keycode.

10.How to record Mac

Choose a key as KC_M(n),go to Marcos page,then click Record Marco,press a list of actions on keyboard,then stop recording.Edit every action and download hex at last.

11.How to Exchange between 6KRO and NKRO Pull out USB from PC,press SPC+N until inserting USB to PC.

12.How to control RGB Underglow Use Fn+QERTYUI as default.You can define it on kbfirmware yourself as well. Fn+Q=on\off RGB Fn+E=Switch RGB Mode Others are used to adjust brightness Saturation Hue.